 



For cost calculation, you must add:

- Basic unit
- Accessories.

Overhead MV Network Fault Passage Indicators - Easergy Flite

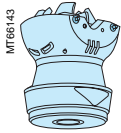


Amperemetric Fault Passage Indicator		
Flite 110 - Clip-on - 9 Leds - < 25 kV	59950	Y043 Y042
Flite 117 - Clip-on - 9 Leds - > 25 kV	59952	Y043

 


Amperemetric Fault Passage Indicator		
Flite 210 - Pole mounted - Lithium power	C1011039	Y045 Y044
Flite 230 - Pole mounted - Solar cell / CdNi	C1011104	Y045

Accessories

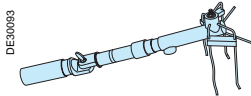

For Clip-on Fault Passage Indicators		
Bowthorp adapter	59954	Y046 Y047 Y046
Sicame adapter	59953	
20 kV hot stick	59955	Y046 Y047 Y046
For pole mounted Fault Passage Indicators		
Output contact for Flite 210 and Flite 230	TS	Y049

Underground MV Network Fault Passage Indicators - Easergy Flair

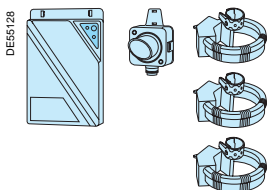

Indicator for MV/LV substation: Flair 279		
Detector only	59956	Y051 Y050
Detector + 3 CT + outdoor lamp	59959	Y051
Indicators for MV/MV substation: Flair 219		
Detector only	59958	Y053 Y052
Detector + 3 CT + outdoor lamp	59978	Y053

Accessories

Current injection case	C2090768	Y054
------------------------	----------	------